18"& 20" FLUID CLUTCH




SERVICE MANUAL



SELF-CHANGING GEARS LIMITED

18" & 20" FLUID CLUTCH

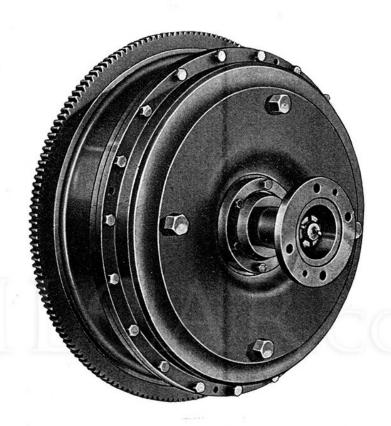

18" FLUID CLUTCH LIST NUMBERS

5976	5977	5978	5979	5980	5981	6229	6256	6309	6310
7006	7007	7355	7413	7440	7441	7456	7457	7458	7512
7515	7517								

20" FLUID CLUTCH LIST NUMBERS

6559 7012 7443 7451 7474 7479 7496

BRITISH PATENT 760249

SELF-CHANGING GEARS LIMITED LYTHALLS LANE · COVENTRY · ENGLAND

TELEPHONE: COVENTRY 89081

TELEGRAMS: SELF-CHANGE, COVENTRY

18" & 20" FLUID CLUTCH

CONTENTS

DESCR	IPTION							 	 	 Page	. 4
ROUT	INE ATTI	ENTIC	N					 	 	 Page	5
OIL SP	PECIFICA	TION						 	 	 Page	5
OVERH	HAUL							 	 	 Page	6
LIST C	F PARTS	FOR	THE	18" FI	LUID	CLUT	сн	 	 	 Page	11
LIST C	F PARTS	FOR	THE	20" FL	.UID	CLUT	сн	 	 	 Page	19
LIST	OF IL	1116	TD A	TIO	NIS						
LI3 I	OF IL	LUS	IKA	····	143						
Fig. 1.	View of C	Clutch	lookin	g on C	Outpu	t End		 	 	 Page	5
Fig. 2.	View of C	Clutch	lookin	g on I	nput E	End		 	 	 Page	5
Fig. 3.	Main Co	mpone	nts of	Fluid	Clutch	١		 	 	 Page	6
Fig. 4.	Section T	hroug	h Fluid	d Clut	ch			 	 	 Page	7
Fig. 5.	Arranger	ment o	f the 2	20″ Flu	iid Clu	ıtch		 	 	 Page	9
Fig. 6.	Arranger	nent o	f the 1	8″ Flu	id Clu	itch		 	 	 Page	9
Fig. 7.	Exploded	l View	of the	18″ F	luid C	lutch		 	 	 Page	17
F:_ 0	Eurladad	ı V:	-6 46 -	20″ E		1				Dago	27

18" & 20" FLUID CLUTCH

DATA

Type: 18" Fluid Clutch

Oil Capacity: 2 gallons, 7 pints (13.07 litres)

Maximum Torque: 550 lb.-ft. (76.04 mkg)

Weight: 2cwts. 21lbs. (111.13 kg)

Type: 20" Fluid Clutch

Oil Capacity: 4 gallons, 2 pints (19.32 litres)

Maximum Torque: 950 lb.-ft. (131.34 mkg)

Weight: 3 cwts. 18 lbs. (160 kg)

DESCRIPTION

In combining the fluid and centrifugal couplings it has been sought to utilize the best features of each type, the fluid coupling dealing with the requirements of smooth take-up from rest, while the centrifugal element ensures positive grip of the friction members at high speeds, although the moving parts are relatively light. The manner of their combination also ensures normal overrun braking and the ability to restart the engine when coasting.

The construction is simple. A normal form of vane-type fluid coupling is embodied in the flywheel in the usual manner. The coupling is reduced in section, however, thereby leaving space between its runner and the inside face of the flywheel proper. This reduces the volume of fluid by about a third with the result that the transfer of kinetic energy is less for any given speed and idling drag is therefore lower. Correspondingly, there is a lower limit to the total torque-transmitting capacity at high speed, and it is to deal with this that the centrifugal member is provided.

Between the runner and the inner face of the flywheel is a dished disc or star member attached to the output shaft. This disc carries four brake shoes with friction material facings. They are each pivoted to the disc at one end, duplicate pivot holes being provided so that the shoes can be mounted to have either leading or trailing characteristics. A garter spring holds the shoes in their retracted position when the output shaft is at rest.

In action, acceleration of the engine produces automatic take-up through the fluid coupling with maximum smoothness. Then, as the output shaft speed rises, the friction clutch shoes are thrown outwardly by centrifugal action so that contact with the flywheel drum is established. From this point the transmission efficiency of the fluid coupling ceases to be of great consequence because rising speed of the runner shaft results in the drive being taken over fully by the centrifugal component.

It will be apparent that as the clutch shoes are carried on the output member they can be fully engaged by the centrifugal effect of road speed driving through the transmission, thus engine braking is effectively retained down to idling speed. Furthermore, a dead engine can be started by coasting or a "lost" engine can be recovered in the same way.

An interesting detail of the design is that by reducing the depth of the fluid coupling, the centrifugal element is incorporated behind it without increasing the overall thickness of the flywheel assembly. This allows the unit to be accommodated in a standard layout without any change or re-positioning of chassis components.

ROUTINE ATTENTION

The filler plug should be removed once a week and the oil level checked. Top up to level of filler plug if necessary. This check should be carried out when the oil is cold

If an excess oil leak is suspected check the gland seal, and renew if necessary.

FILLING THE UNIT WITH OIL

To fill the unit with oil proceed as follows:—
Turn the unit until a filler plug stands in the 12 o'clock position.

Remove the plug and fill with oil until the unit is full and oil is up to the level of the filler hole.

Replace the plug.

OIL SPECIFICATION

A turbine type oil conforming to Shell Tellus 27 is the ideal, but alternatively a normal engine type oil will give satisfactory service.

Check oil level weekly.

Renew oil at every engine overhaul.



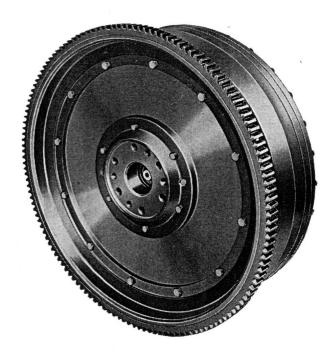


FIG. 1. VIEW OF CLUTCH LOOKING ON OUTPUT END

FIG. 2. VIEW OF CLUTCH LOOKING ON INPUT END

OVERHAUL

(See Fig. 6)

The overhaul procedure described herein although based on the 18" fluid clutch is applicable to the 20" clutch, the two units being almost identical, the slight differences being covered within the text.

TO REMOVE THE COMPLETE FLUID CLUTCH

To remove the clutch from the engine first remove the bolts (6), spring washers (5) and lift away the rear casing (7) complete with the shaft and associate parts. The bolts holding the front casing to the crankshaft can then be removed and the front casing assembly withdrawn.

TO DISMANTLE (See Fig. 6)

- Remove the split pin (16), slotted nut (15), washer (17), and withdraw the coupling (18).
- 2. Remove the nuts (21), stiffener ring (12), and withdraw the gland seal (13), followed by the joint (11), spacing ring (22), joint (10) and rubbing washer (19).
- 3. The shaft (14) can now be pressed clear of the bearing (32). The bearing (32), and bearing housing (if fitted) can then be withdrawn.

4. The shaft (14), which is complete with runner (27), reaction member (4), and clutch shoe assembly (42), can now be dismantled as follows:—

Remove the nuts (35) from the bolts (33), and withdraw the shaft.

Remove the nuts (39), washers (40), from the bolts (41), and withdraw the runner (27) and baffle plate (25) from the reaction member (4).

The clutch shoe assembly (42) can now be removed from the reaction member (4) by withdrawing the garter spring (31).

Note: On the 20"fluid clutches it will be found that a distance piece has been incorporated between the runner and reaction member (see item 10, fig. 5).

This can be removed when the runner and reaction member are separated. A separating ring has also been fitted between the front and rear casings (see item 4, fig. 5).

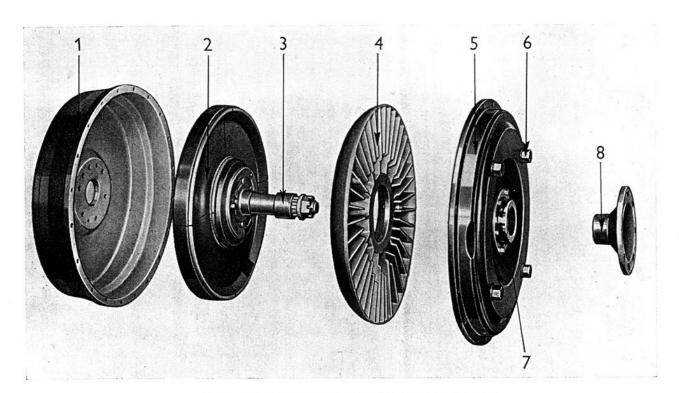


FIG. 3. MAIN COMPONENTS OF THE 18" FLUID CLUTCH

- 1. Front Casing
- 2. Clutch Assembly
- 3. Shaft
- 4. Runner

- 5. Rear Casing
- 6. Filler Plug

- 7. Gland Seal
- 8. Coupling Flange

TO ASSEMBLE (See Fig. 6)

IMPORTANT: Ensure that all parts are clean and suitable for further service.

- Replace the clutch shoe assembly (42), complete with the segments and linings, onto the reaction member (4), first ensuring that the insert block (29), is free on the pin (30). Replace the garter spring (31).
- 2. The shaft can now be replaced into the reaction member and secured into position with bolts (33) and nuts (35) first ensuring that the ferrules (34) are in place in the reaction member.
- Replace the runner (27) sleeve (if fitted) and baffle plate (25) onto the reaction member and secure it into position with bolts (41), washers (40), and nuts (39).
- Reposition the rear casing (7) complete with bearing housing (23) and joint (10), over the shaft and press home the bearing (32).
- 5. Replace the spacing ring (22) onto the face of the bearing housing, first ensuring that the joint (20), is in position.
- 6. Replace the rubbing washer (19), followed by the joint (11), gland seal (13), and stiffener ring (12), securing in position with nuts (21).
- Replace the coupling (18), and secure in position with washer (17), slotted nut (15) and split pin (16).
- 8. The front casing assembly complete with starter ring and separating ring (if fitted) can now be repositioned onto the engine and secured into position.

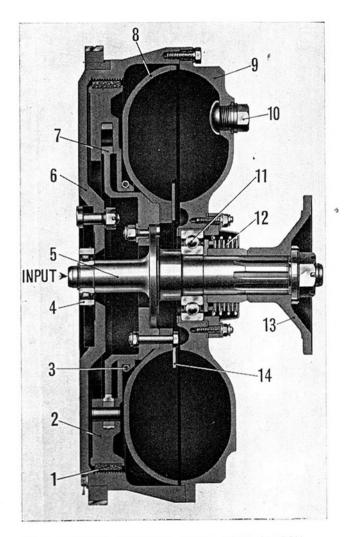


FIG. 4. SECTION THROUGH THE 18" FLUID CLUTCH

- 1. Clutch Lining
- 2. Clutch Shoe Segment
- 3. Garter Spring
- 4. Bearing
- 5. Shaft
- 6. Front Casing
- 7. Reaction Member

- 8 Runner
- 9. Rear Casing
- 10. Plus
- 11. Bearing
- 12. Oil Seal
- 13. Output Coupling
- 14. Baffle Plate
- 9. The rear casing (9) complete with the shaft and associate parts can now be replaced and secured with bolts (6) and spring washers (5).
- 10. All nuts and bolts must now be checked to ensure that they are tight, after which the connecting shaft can be bolted to the output coupling and the unit filled with oil. (See 'Filling the unit with oil', page 5).

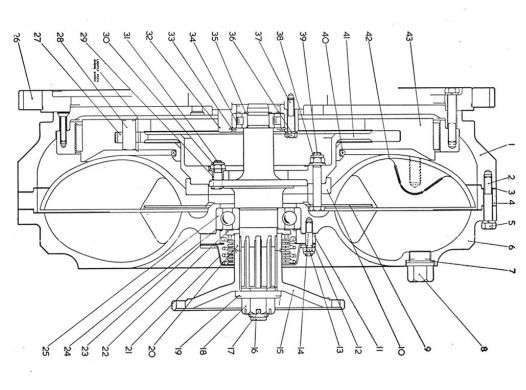


Fig. 5. ARRANGEMENT OF THE 20" FLUID CLUTCH


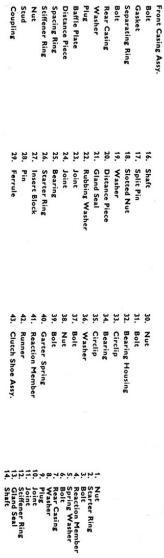


FIG. 6 ARRANGEMENT OF THE 18" FLUID CLUTCH

Slotted Nut
Split Fin
Vasher
Coupling
Rubbing Washer
Joint
Nut
Spacing Ring
Bearing Housing
Bearing Housing
Bearing Fine
Bearing

Insert Block
Pin Garter Spring
Garter Spring
Bearing
Bott
Ferrule
Nut
Circlip
Bearing
Circlip

545656565456

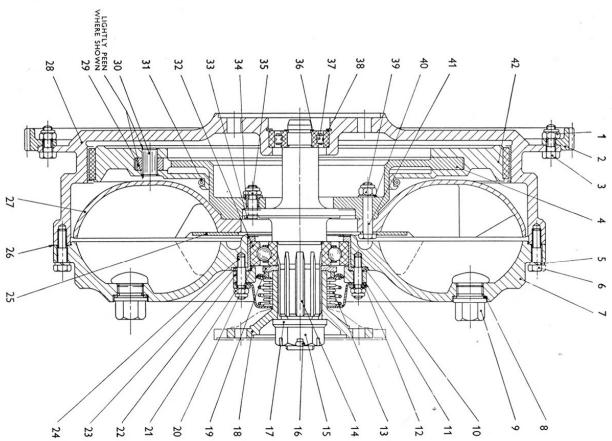

PARTS LIST

List Nos.: 5976, 5977, 5978, 5979, 5980, 5981, 6229, 6256, 6309, 6310, 7006, 7007, 7355, 7413, 7440, 7441, 7456, 7457, 7458, 7512, 7515, 7517.

(See Fig. 7)

All basic parts are listed below, differing parts being entered under their particular list numbers.

Item No.	Part No.	Des	scriptio	on			No. Off	1	List 1	No.	Remarks
1	10305/15	Stud — 5 " B.S.F.					6	All	List	Nos.	Rear Casing to gland seal.
2	17330	Spring Washer 3"					20	"	,,	,,	Rear Casing to Front Casing.
3	19046	Split Pin $\frac{3}{16}$ " × $2\frac{1}{4}$ " I	ong				1	**	**	**	
4	25283	Washer 3					6	"	••	"	Reaction member to runner.
5	29090	Circlip 25 mm. Ext.					1	**	**	**	
6	30021	Roller Bearing					1	**	**	**	
7	33275	Runner					1	,,	,,	••	
8	33276	Insert Block					4	**	,,	**	
9	33285	Bolt					6	,,	**	,,	Reaction member to runner.
10	33287	Garter Spring					1 1	,,	"	,,	
11	36314	Ball Bearing					1 1	,,	,,	,,	
12	38513	Bolt ¾ B.S.F.	•••	•••	•••	•••	20	,,	,,	**	Rear Casing to Front Casing.
13	38514	Bearing Pin					4	**	,,	**	
14	38516	Bearing Housing					1	**	,,	**	
15	38517	Rear Casing					1	,,	,,	,,	
16	38518	Joint					1	,,	**	**	.015" Thick.
17	38519	Pinnacle Nut 3" B.S	S.F.				6	,,	,,	,,	The second second
18	38520	Pinnacle Nut 3" B.S	S.F.				6	,,	,,	**	
19	38582	Washer					4	,,	,,	,,	
20	38583	Plug					4	***	,,	**	
21	38600	Pinnacle Nut 5 " B	.S.F.				6	,,	,,	**	
22	38604	Reaction Member					1	,,	,,	,,	
23	38673	Gasket					1 1	**	,,	**	
24	282711	Ferrule		***			6	,,	"	**	
25	282712	Bolt					6	**	,,	,,	
26	521686	Nut — Slotted					1 1	,,	,,	,,	
27	521687	Washer					1	,,	,,	,,	
28	521689	Gland Seal					1	,,	,,	,,	
29	521690	Spacing Ring					1	,,	,,	,,	
30	521691	Joint Ring					1 1	,,	,,	,,	
31	521692	Rubbing Washer					1 1	,,	,,	,,	


521693 521747 38537	Stiffener Ring									
521747 38537	Julia in initia					1	ΔΙΙ	List	Nos	
38537	1-1	•••		•••	•••	i	All	LISC	1403.	
	Front Casing	•••	•••	• • • •	•••		1:	F07/	5070	5 ⁵
		•••	•••	• • • •	•••	8 1	LIST	37/6,	5979	
2546F	Starter Ring	•••		• • •	•••	1 1	**	,,	**	
10873/1	Bolt — 3" B.S.F.	٠	• • •	• • •	•••	12	**	**	**	
38519	Pinnacle Nut 3" B.	S.F.	•••	• • •		12	**	**	"	
38562	Runner Shaft			•••	•••	1	**	**	,,	
11763	Circlip for Roller B	Bearing	2½" In	t		1	**	**	**	
38567	Coupling Flange					17	List	5976	only	
	Coupling Flange					1 /	**	5979	,,	
4665	Sub-Assembly Clu	tch Sh	oe Se	gment	and					
	Liner '					1 1	List	5976.	5979	
33279	Shoe Liner)	Sub-Assembly
					100000		**		7	4665
	D MI DI					· · · · · ·	••		-	1005
5, 5, ,	Dame Frace	•••				'	**	**	"	
39619	Front Casing					4	1:	F077	5000	
	Ctonton Ding			• • •	•••		List	59//,	3980	
	Starter King			• • •			**	**	**	
	Bolt & B.S.F.	•••	• • •				**	**	"	
	Spring Washer 3"	•••				12	**	**	"	
	Circlip for Roller E	Bearing	2½" lr	nt.		1	••	••	,,	
	Coupling Flange					17	List	5977	only	
38608	Coupling Flange					1 1			,	
4665	Sub-Assembly Clu				and	'			"	
	Liner			6		1 1	List	5977	5980	
33279								3777,	3,00	Sub Assamble
							**	**	7	Sub-Assembly
							••	••	")	4665
							"	••		
30302	Kumer Share	•••				'		••	"	
4804	Assembly of Front	Casing	and S	tarter	Ring	1	List	5981,	5978	
						1		.,)	
A72327	Starter Ring					1				
38655		Plate				5				Assembly 480
										71336111017 100
	Bolt — 5" BSF									
	Runner Shaft :							**	")	
30302						'	**	**	"	
38567				• • • •		1		F070		
	Coupling Flange		•••	•••					only	
	Sub-Assembly Cli	tch CL				1)	**	2781	"	
-1003	linan			gment		ایا		F004	5070	
22270			•••	• • • •			List	5981,	5978	202 200 000
			• • • •				"	**	\	Sub-Assembly
						1	**	**	,, }	4665
						1	**	,,	,, '	
38562	Runner Shaft				•••	1	••	••	,,	
38890	Front Casing			2000	7000	1	1	ist 62	29	
	Coupling Flange	_	7.70			: i		" '	'	
	Coupling Flange				3.340000			,, ,		
	Cub Assembly Cl			•••		1		,, ,		
A0234	Sub-Assembly Clu		oe Se	gment	and				- 1	
22270		• • •	• • •						,	
			•••			1				Sub-Assembly
						1				A6234
46160	Baffle Plate					1			-	
	33279 38624 37849 38619 257756 17529 17330 11763 38567 38608 4665 33279 38624 37849 38562 4804 33271 A72327 38655 33277 38163 38562 38567 38608 4665 33279 38624 37849 38562 38567 38608 4665	33279 Shoe Liner 38619 Front Casing 38619 Front Casing 38619 Starter Ring 38619 Front Casing 38619 Starter Ring 38619 Front Casing 517529 Bolt 3 B.S.F. 17330 Spring Washer 3 Circlip for Roller I Coupling Flange 4665 Sub-Assembly Clu Liner 33279 Shoe Liner 38624 Shoe Segment 38624 Shoe Segment 38624 Shoe Segment 38625 Runner Shaft 4804 Assembly of Front Front Casing 4804 Assembly of Front Front Casing 51865 Starter Ring Keep 33277 Starter Ring Flange Coupling Flange Coupling Flange Coupling Flange Coupling Flange Coupling Flange Sub-Assembly Clu Liner 33279 Shoe Liner Shoe Segment 38890 Front Casing Circlip for Roller I Coupling Flange Coupling Flan	Sub-Assembly Clutch Shoe Liner	Sub-Assembly Clutch Shoe Set	Sub-Assembly Clutch Shoe Segment Liner	Sub-Assembly Clutch Shoe Segment and Liner Shoe Liner Shoe Segment Sh	Sub-Assembly Clutch Shoe Segment and Liner	Sub-Assembly Clutch Shoe Segment and Liner	Sub-Assembly Clutch Shoe Segment and Liner	33279 Shoe Liner 1 List 5976, 5979 38624 Shoe Segment 1 Starter Ring 1 List 5977, 5980 Starter Ring 1 List 5977, 5980 Starter Ring 1 List 5977, 5980 Starter Ring 1 Coupling Flange 1 Coupling Flange 1 List 5977 only Spring Washer ½" 12 12 12 13 Spring Washer ½" 1 14 15 Spring Washer ½" 1 15 Spring Washer ½" 1 12 13 Spring Washer ½" 1 1 1

Item No.	Part No.	D	escriptio	n			No. Off	List	No.		Remarks
	38562	Runner Shaft					1	List	6229		
	20050	Frank Casina						1 :	/25/		£
	38859	Front Casing	D	21// 1		•••	1	LIST	6256		
	11763	Circlip for Roller	Bearing	2½ Ir	nt.	•••	1	"	**		
	4665	Sub-Assembly Clu	itch Sh	oe Se	gment	and					
		Liner	• • •	•••	•••	•••	1	**	**	_	
	33279	Shoe Liner			• • •	•••	1	**	**	}	Sub-Assembly
	38624	Shoe Segment	•••		•••		1	**	**	5	4665
	37849	Baffle Plate	•••	•••	•••	•••	1	"	**		
	38562	Runner Shaft					1				
	39845	Front Casing					lil	List 63	09"63	10	
	E8055	Starter Ring			•••						
	11763	Circlip for Roller	 Boaring	21" 1		•••	1 1	,, ,	, ,	,	
	38567	Coupling Flange	_	-		•••		List 63	09 00	lv.	
	38608		•••	•••	•••	•••	1 1	,, 63		'	
	38562	Coupling Flange		•••	• • • •	•••		List 630			
		Runner Shaft			•••		'	F121 031	J7, 03	10	
	4665	Sub-Assembly Clu			gment	and	,				
	22270	Liner	• • • •	•••	• • •		1 1	,, ,	, ,	_	C L A
	33279	Shoe Liner		•••	• • • •	•••	1	,, ,	, ,	}	Sub-Assembly
	38624	Shoe Segment	• • •	• • •	• • •		1	11 1	, ,,	1	4665
	37849	Baffle Plate		• • • •	• • •		1	,, ,	, ,,		
	38537	Front Casing					1	List	7006		
	2546F	Starter Ring					1 1	,,	,,		
	10873/1	Bolt 3" B.S.F.					12				
	38519	Pinnacle nut 3" B.S					12	".	**		
	11763	Circlip for Roller					1 1	**	**		
	33316	Coupling Flange		_		•••		"	**		
	521688	Distance Piece				•••		**	**		
	521694	Runner Shaft			•••		1 1	**	**		
	4665	Sub-Assembly Clu					'	"	**		
	4003	1.1	iccii Sii		gment		4				
	33279	CI II	•••	• • • •	• • • •		1 1	**	**	`	C - L A L L
	38624		•••	•••	•••		1 1	**	**	}	Sub-Assembly
	37849	Shoe Segment Baffle Plate				•••	1 1	"	**	J	4665
	3/047	ballie Flate	•••	•••	• • • •	•••	'	,,	**		
	44182	Front Casing					1	List	7007		
	OE411	Starter Ring					1	,,	**		
	521604	Coupling Flange					1	**	**		
	521688	Distance Piece					1	,,	,,		
	521694	Runner Shaft					1	,,	,,		
	4665	Sub-Assembly Clu	itch Sh	oe Se	gment	and					
		Liner					1	,,	**		
	32279	Shoe Liner	•••				1	**	**	1	Sub-Assembly
	38624	Shoe Segment					1	,,	"	3	4665
	37849	Baffle Plate	•••				1	,,	,,		
	A6679	Sub-Assembly Fro	nt Cas	ing ar	nd Ada	ptor					
	1,711	Ring			•••		1	List	7355	.	
	44716	Front Casing		•••	•••		1	**	**)	
	44717	Starter Ring Adap	tor	•••	•••		1	**	**	>	Sub-Assembly
	19153	Bolt 5 B.S.F.	•••	•••	•••		12	,,	**		A6679
	17329	Spring Washer 5					12	,,	,,	J	
	1051	Starter Ring Gear					1			-	
	4851 43882	Coupling Flange	•••					**	**		

ltem No.	Part No.	D€	escription				No. Off	List	No.		Remarks
	521688	Distance Piece					1	List	7355		
	521694	Runner Shaft		•••	•••		i		1333		
	4665	Sub-Assembly Clu	 tab Ch				' 1	**	**		
	4003	1 .			-		1				
	22270	Liner	•••	•••		•••	1	**	**		
	33279	Shoe Liner	• • •	•••	•••		1 1	**	**		
	38624	Shoe Segment	•••	•••			1 1	**	**		
	37849	Baffle Plate		•••	•••		1		**		
	43809	Front Casing		.··· .			1	List	7413		
	11763	Circlip for Roller I	Bearing	$2\frac{1}{2}$ " In	it.		1	**	**		
	38562	Runner Shaft		• • •			1	,,	**		
	40146	Coupling Flange					1	,,	**		
	3756	Assembly Layrub (Coupling	3			1	,,	,,		
	31546	Input Coupling —	Outer 1	1emb	er		1 1	,,	,,		
	4665	Sub-Assembly Clu	tch Sho	oe Se	gment	and			648		le .
		Liner '					1	,,	,,		
	33279	Shoe Liner					1)	Sub-Assembly
	38624	Shoe Segment					1	"	"	>	4665
	37849	Baffle Plate		•••		•••	1 1	"	**)	1003
	31546		Outor N			•••	1 1	**	**	1	
	31340	Input Coupling —	Outer i	remo	er	•••	'	,,	"		
	44182	Front Casing					1	List	7440		
	OE411	Starter Ring					1	,,	**		
	45710	Coupling Flange					1	,,	,,		
	38562	Runner Shaft					1	,,	,,		
	4665	Sub-Assembly Clu									
		Liner	• • •				1 1	**	**		
	33279	Shoe Liner					1	,,	**)	Sub-Assembly
	38624	Shoe Segment					1	.,	••	5	4665
	37849	Baffle Plate					1	,,	,,		
	38619	Front Casing					1	List	7441		
	11763	Circlip for Roller I	Bearing	21" In	it.		1	,,	**		
	45694	Coupling Flange					1 1	,,	,,		
	38562	Runner Shaft					1 1				
	4665	Sub-Assembly Sho				r	l i l	.**	"		
	33279	Shoe Liner	c ocgini	one an	id Lille		i	"	**)	Sub-Assembly
	38624	Shoe Segment	• • • •				1 1	"	"	>	4665
	37849	Baffle Plate		•••	•••			. "	**)	4003
			•••				'	"	,,		
	A6852 45803	Sub-Assembly From	nt Casin	_	•••		1 1	List	7456	_	
		Front Casing	•••	•••	•••	•••	1 1	**	**		
	45802	Starter Ring Adapt	tor	•••	•••	•••	1 1	**	**	>	Sub-Assembly
	45796	Rivet	• • •	•••	•••		12	,,	**		A6852
	45801	Adaptor Ring	•••	•••			1	***			11.
	46147	Gasket		•••			1	**	**	. 1	·005" Thick
	13632	Dowel					1	. ,,	**		
	40268	Coupling Flange					1	,,	,,		
	3756	Layrub Coupling					1	,,	,,		-
	31546	Input Coupling —	Outer 1	1emb	er		1 1				
	38562	Shaft Runner					lil	"	"		
	4665	Sub-Assembly Clu	itch Sho	oe Se	gment	and	'	"	••		
	030.00.00000000	Liner					1	,,	,,		
	33279	Shoe Liner			•••		1 1	"	,,)	Sub-Assembly
	38624	Shoe Segment					i			>	4665
	37849	Baffle Plate					lil	"	**)	.005
						• • •	1 4 1	**	**		

ltem No.	Part No.	Do	escriptio	on			No. Off	List N	۱٥.	Remarks
	A6852	Sub-Assembly From	at Casi	na			1	List 7	457	
	45803	Front Cosing						LISC /	737	
		Front Casing				• • • •	1 1	"	**	11 6 1 1 11
	45802	Starter Ring Adapt	tor				1	**	**	Sub-Assembly
	45796	Rivet					12	"	**	J A6852
	45801	Adaptor Ring					1 1	,,	.,	
	46147	Gasket					1 1	,,	,,	·005" Thick
	13632	Dowel					1 1	,,	,,	
	40268	Coupling Flange					lil			
	4665	Sub-Assembly Clu				204	'	"	••	
	4005	1			gillelit					
	22270		• • • •				1 1	***	"	
	33279	Shoe Liner		• • •			1	**	**	Sub-Assembly
	38624	Shoe Segment					1	**	,,	1 4665
	38562	Runner Shaft					1 1	,,	,,	
	37849	Baffle Plate					1 1	,,	,,	
	A6852	Sub-Assembly From	ot Casi	nσ			1	List 7	458	
	45803	Front Casing					1 1			
	45802				•••		1 8 1	**	**	11000
		Starter Ring Adapt					1	**	,,	Sub-Assembly
- 1	45796	Rivet				:	12	**	,,	A6852
	45801	Adaptor Ring					1	,,	,,	
	46147	Gasket					1	,,	,,	·005" Thick
	13632	Dowel					1	**		100000
	38567	Coupling Flange					1 1			
	4665	Sub-Assembly Clu	tch SI			200	'	"	"	
	4005	1 1 .				and				
	22270	Liner	• • • •	• • •	• • • •		1 1	**	**	
1	33279	Shoe Liner	• • • •				1	**	,,	
	38624	Shoe Segment					1	**	,,	∫ 4665
	38562	Runner Shaft					1	**	,,	
	37849	Baffle Plate	•••				1	,,	,,	
	44182	Front Casing					1	List 75	515	
	OE411	Starter Ring					1 1			
	4665	Sub-Assembly Clu	tch SI				'	**	**	
- 1	4003	11	ten 31		gment	and				
- 1	22270	C1	• • • •	• • • •	• • • •	• • • •	1	**	**	
	33279	Shoe Liner	• • • •	• • • •			1	**	**	∑ Sub-Assembly
	38624	Shoe Segment					1	**	,,	\$ 4665
	38562	Runner Shaft					1	,,	,,	
	37849	Baffle Plate					1		,,	
						13335				
	46402	Front Casing					1	List 75	512	
	38608	Coupling Flange					1	,,	,,	
	11763	Circlip for Roller B	Bearing	2 2 1 Ir	nt.		1		,,	
- 1	4665	Sub-Assembly Clu	tch Sh	noe Se	gment					
- 1		Liner '			8		1			
- 1	33279	Shoe Liner	•••	• • • •	•••		i	"	"	Cub Assault
- 1			•••	• • • •			100000	,,	**	Sub-Assembly
	38624	Shoe Segment	• • • •				1	**	,,	<i>∫</i> 4665
- 1	38562	Runner Shaft	• • •				1	**	**	
	37849	Baffle Plate					1	**	,,	
	46401	Front Casing					1	List 75	517	
	38567	Coupling Flange					1			
	11763	Circlip for Roller B					1		,	
	4665	Sub-Assembly Clus	ch Ch	S = 11	ont 0 1	inor		,,	,	
		Sub-Assembly Clut			lent & L	mer	1	,, ,	•	
	33279	Shoe Liner	• • •	•••	•••	• • • •	1	,, ,	,	Sub-Assembly
	38624	Shoe Segment					1	,, ,	,	\$ 4665
	38562	Runner Shaft					1		,	
- 1	37849	Baffle Plate					1	5.5		1
	3/01/	Danie i lace			* * * *			11 1	*	



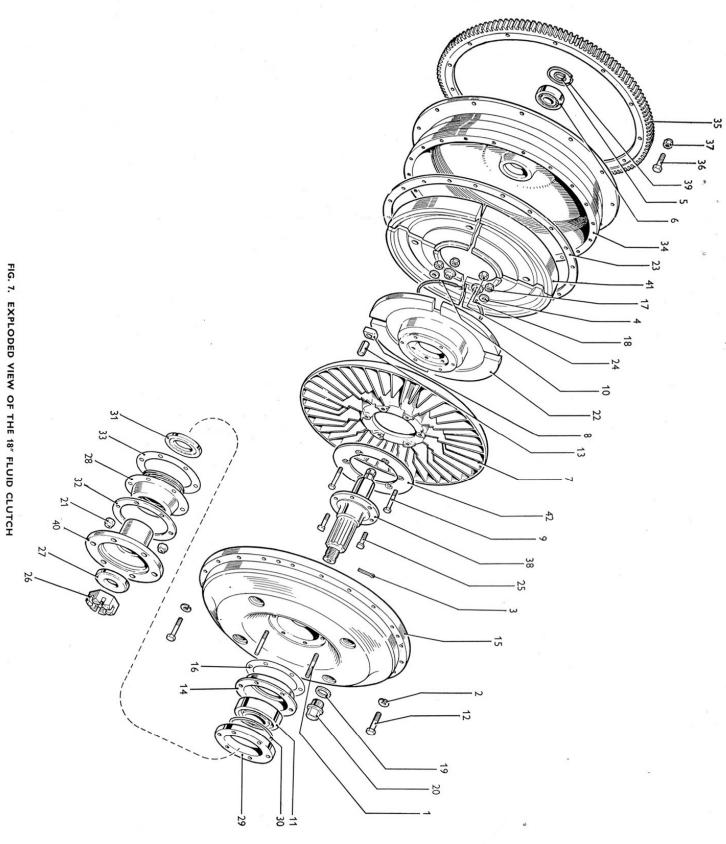

PARTS LIST

LIST Nos. 6559, 7443, 7451, 7474, 7479, 7496

LIST 6559 (See Fig. 8)

Item No.	Part No.	Description				No.Off	List No.	Remarks
1	O.E 411	Starter Ring				1	6559	
2	16487	7" B.S.F. Slotted Nut				1 1	,,	
3	19046	$\stackrel{\circ}{\text{Split Pin}} \stackrel{3}{\text{16}}'' \times 2\frac{1}{4}'' \text{ Long}$				1	,,	
4	25282	5" Dia. Plain Washer				4	,,	
5	30021	Roller Bearing				1	,,	
6	4023	SubAssy. of Clutch She					.,	
-		Linings				1	,,	4 per Set
	33272	Clutch Shoe Segments				1 Set	,,, }	Sub-Assembly
\ I	33279	Clutch Shoe Linings		7.\		1 Set	", }	4023
7	33276	Insert Block		J.A.		4	,,	1025
8	33278	Clutch Shoe Pin		/\		4	(1)	N 17 17 1
9	25283	3" Dia, Plain Washer				6		
10	33287	Garter Spring		/ \		1 1	"	1/_ \
11	38519	3" B.S.F. Pinnacle Nut				6	CO 100 10	0 00
12	38520	3" B.S.F. Pinnacle Nut				6	,,	
13	38600	ቼ" B.S.F. Pinnacle Nut				6	,,	
14	40210	្រឹ B.S.F. Stud				6	,,	
15	41277	Coupling			•••	1 1	"	
16	A5988	Assembly of Front Casing				i	",	
	41363	Front Casing				i	"	
	41367	Serrated Ring				1 1	"	
	43666	र्ह् " B.S.F. Csk. Head Scre				12	"	A.5988
	17330	3" Spring Washer				12	"	71.3700
	17954	3" B.S.F. Bolt				12	"	
	41366	Adapter Ring				1	"	
17	41364	Rear Casing				1	"	
18	41365	Distance Ring				1 1	"	
19	41368	Runner				1	"	
20	41369	Reaction Member			•••	1	,,	
21	41370	Distance Piece		((27.45.70)	•••	1	,,	
22	41371	Bolt—Reaction Member				6	,,	
23	41372	Runner Shaft	•••			1	,,	
24	41373	Bearing Housing	•••			1	,,	
25	41374	Distance Piece	•••	•••	•••	1 1	,,	
26	41375	Carlina	•••	•••	•••	2	"	
27	41376	\\/h	•••	•••		1	"	
28	41379	SULINE Dala	•••	•••	• • • •	4	,,	Bearing Housi
20	113/	16" U.N.P. BOIL	•••	• • • •	•••	7	,,	to Crankshaft.
								to Crankshalt.

LIST 6559 (Continued)

Item No.	Part No.	Des	cription			No.Off	List No.	Remarks
29	41380	3″ B.S.F. Bolt				 30	6559	Rear Casing to to Front Casing
30	281809	25 m/m. Ext. Circl	ip			 1	,,	
31	282711	Ferrule	٠			 6	,,	
32	282712	Bolt				 6	,,	
33	282713	Plug				 4	**	
34	282714	Washer				 4	**	
35	521689	Gland Seal				 1	**	
36	521690	Spacing Ring				 1	,,	
37	521691	Joint Ring	•••	• • •		 1	**	
38	521692	Rubbing Washer				 1 1	**	
39	134493	Ball Bearing	•••	• • •		 1	**	
40	46293	Internal Circlip		•••	• • • •	 1 1	**	
41	521693	Stiffener Ring	•••	•••		 1 1	**	
42	521747	Joint	• • • •	•••	•••	 1 1	,,	
43	42636	Baffle Plate		•••	• • • •	 1	,,	
44	17330	3/8 Spring Washer	•••	•••	•••	 30	"	Rear Casing to Front Casing.

LIST 7443 & 7474

Item No.	Part No.	Description				No.Off	List	No.	Remarks
	5708	Starter Ring				1	7443,	7474	
	11763	Circlip, Int				1	,,	"	For Roller Bear
	16487	7" B.S.F. Slotted Nut				1	,,	,,	
	17330	3" Dia. Spring Washer				30	,, .	,,	Rear Casing.
	19046	Split Pin $\frac{3}{16}$ " x $2\frac{1}{4}$ " long				1	,,	,,	
	25283	3" Dia. Plain Washer				6	,,	,,	
	30021	Roller Bearing				1	,,	,,	
	33276	Insert Block				4	"	**	
	17309	5 " Dia. Plain Washer				6	,,	,,	
	4023	Sub-Assy. of Clutch Sh	oe Se	egments	&				
		Linings				1	**	,,	4 per Set.
	33272	Clutch Shoe Segments				1 set	,,	,, }	Sub-Assembly
	33279	Clutch Shoe Lining				1 set	,,	,, }	4023
	33278	Clutch Shoe Pin				4	,,	**	
	33287	Garter Spring	•••	• • • •		1 1	,,	,,	
	38519	3" B.S.F. Pinnacle Nut				6	**	,,,	
	38520	🖁 B.S.F. Pinnacle Nut				6	11	,,	

LIST 7443 & 7474 (Continued)

Item No.	Part No.	Desc	ription				No.Off	List No.	Remarks
	38600	5 " B.S.F. Pinnacle I	Nut				6	7443, 7474	
	40210	5" B.S.F. Stud					6	" "	
	41277	Coupling					1 1	List 7443 onl	v
	521604						1	List 7474 onl	
	41364	Rear Casing					i	7443, 7474	/
	41365	Distance Ring				•••	1 1		
	A6831	Assembly of Front	Casina	•••		•••	il	,, ,,	
	45725	Front Casing	Casing	• • • •	• • • •	• • • •	1 1	,, ,,	
	41367				•••	• • • •	1 1	"	
	43666	등" B.S.F. Csk. Head	d Scrove			• • • •	12	,, ,,	A6831
	17330	1 1 1 1			• • • •		12	,, ,,	70031
	17954	VVasher	•••	•••	•••	•••	12	",	11
	44318			•••	• • • •	• • • •	1 1	"	
		Starter Ring Adapte		• • • •	• • • •	• • • •		"	
	41368	Runner	•••	• • • •	• • •	• • • •	1 1	,, ,,	
	41369	Reaction Member		• • •		• • •	1 1	,, ,,	
	41370	Distance Piece	• • • •	• • • •	• • •	• • •	1	"	
	41371	3" B.S.F. Bolt	•••	• • • •			6	"	Reaction Memb
	41372	Runner Shaft	•••	• • • •			1	"	
	41374	Distance Piece	• • •	• • • •			1	"	
	41375	Gasket					2	,, ,,	
	41376	Washer					1	,, ,,	
	41380	⅓" B.S.F. Bolt	•••	•••	•••		20	,, ,,	Rear Casing to Front Casing.
	42636	Baffle Plate					1	,, ,,	Tronc Gasing.
	44313	Adaptor	• • •	• • •			1	,, ,,	
	44315	5" U.N.F. Bolt	• • •			• • •	6	,, ,,	
	44316	§" U.N.F. Bolt	• • • •	• • • •			6	",	
	44317	Dowel		• • • •		• • •	2	"	
	44333	Dowel	• • • •	• • •			2	,, ,,	
	44334	Locking Plate		•••			3	,, ,,	
	134493	Ball Bearing					1	,, ,,	
	281809	25 m/m. Circlip, Ex	kt.	• • • •			1	,, ,,	
	282711	Ferrule					6	,, ,,	
	282712	Bolt					6	,, ,,	
	282713	Plug					4	,, ,,	
	282714	Washer					4	,, ,,	1
	521689	Gland Seal					1	,, ,,	
	521690	Spacing Ring					1	,, ,,	
	521691	Joint Ring					1 1	,, ,,	
	521692	Rubbing Washer					1	,, ,,	
	521693	Stiffener Ring					1 1	" "	
	521747	Joint					1 1	,, ,,	

LIST 7451

Item No.	Part No.	Description				No.Off	List No.	Remarks
	11763	Circlip, Int	٠			1	7451	For Roller Bear
	16487	7" B.S.F. Slotted Nut				1	,,	ing.
	17330	3/8 Spring Washer	•••			30	.,,	
	19046	Split Pin				1 1	,,,	
	25282	5" Dia. Plain Washer				4		
	25283	3/ Dia. Plain Washer				6	,,	
	30021	Roller Bearing				1 1	,,	
	4023	Sub-Assy. of Clutch Show				'	,,	
	1023	1	,			1 1		4 per Set
	33272	Clutch Shoe Segments				1 set	")	Sub-Assembly
	33279	Clutch Shoe Linings		•••	• • • •	1 set	" }	4023
	33276	l Di i	•••	•••	• • • •	4	,,	1023
	33278	CI . I CI D:	•••	•••	•••	4	"	
	33287	Company	•••	•••	•••	1	"	
	36559	F WILLE DI	• • •	• • • •	• • • •	4	,,	Donning Hausin
	36337	。" U.N.F. Bolt	• • • •	• • •	• • • •	7	"	Bearing Housing to Front Casing
	38519	3" B.S.F. Pinnacle Nut				6	,,	to from Casing
	38520	3" B.S.F. Pinnacle Nut				6		
	38600	5" B.S.F. Pinnacle Nut				6	,,	
	40210	ቼ" B.S.F. Stud				6	",	
	41277	Coupling Flange		• • • •		1 1	,,	
	41364	Rear Casing				lil	,,	
	41365	Distance Dies			• • • •	lil	,,	
	41368	Dunnan	•••	• • • •		i	,,	
	41369	Reaction Member	• • • •	• • • •	• • • •	1 1	,,	
	41370	Distance Piece	• • • •			1 1	,,	
	41371	Bolt	• • • •	•••	•••	6	. "	Reaction Membe
	41372	Runner Shaft	•••	• • • •	•••	1 1	,,	Treaction Fielibe
	41374	Distance Piece	•••	•••	•••	1 1	,,	
	41375	Cooker	•••	•••	• • • •	2	,,	
	41376	Machan	• • • •	•••	•••	1	,,	
	41380	3" B.S.F. Bolt		•••	•••	30	,,	Rear Casing to
	1,,,,,	8 2.0 20.0	•••	• • • • •	•••	"	"	Front Casing.
	42636	Baffle Plate				1	,,	Tronc Gusting.
	A6851	Assembly of Front Casing				1	,,	
	45758	Front Casing				1	,,)	
	45782	Serrated Ring				1		
	45793	Starter Ring Adaptor				1	l ". }	A.6851
	45796	Rivet				8	" (/
	45797	Rivet				12	"	
	45795	Bearing Housing				1	,,)	
	281809	25 m/m. Ext. Circlip				1 1	,,	
	282711	Ferrule				6	,,	
	282712	Bolt			•••	6	,,	
	282713	Plug				4	,,	
	282714	Washer				4	*****	
	521689	Gland Seal				1		
	521690	Spacing Ring				1		
	521691	Joint Ring	•••			1	"	
			•••	•••	•••	'	"	1

LIST 7451 (Continued)

Item Part No.	No.	De	n	No.Off	List No.	Remarks			
5210 5210 5211 134	693 747	Rubbing Washer Stiffener Ring Joint Ball Bearing					1 1 1 1	7451 	

LIST 7479

Item No.	Part No.	Descripti	on		No.Off	List No.	Remarks	
	11763	Circlip, Int				1	7479	For Roller Bear
	16487	7" B.S.F. Slotted Nut				1 1		mg.
	17330	3/ Spring Washer				45	,,	15-Starter Ring
								30-Rear Casing.
	19046	Split Pin				1	**	
	25283	3 Dia. Plain Washer				6	,,	
	30021	Roller Bearing		• • • •		1	,,	
	4023	Sub-Assy. of Clutch Si	hoe Se	gment	and			
		Linings:				1 1	,,	4 per Set.
	33272	Clutch Shoe Segments				1 set	,,	\ Sub-Assembly
	33279	Clutch Shoe Linings				1 set	,,	4023
	33276	Insert Block				4	,,	
	33278	Clutch Shoe Pin			• • • •	4	,,	
	33287	Garter Spring		• • • •		1	,,	
	38519	3" B.S.F. Pinnacle Nut		•••	• • • •	6	11.	
	38520	3" B.S.F. Pinnacle Nut				6	**	
	38600	18" B.S.F. Pinnacle Nut	• • • •	•••	• • • •	6	**	
	38562	Runner Shaft	• • • •	• • •	•••	1 1	**	
	40210	ቶ" B.S.F. Stud	•••	• • • •		6	,,	
	40879	½" U.N.F. Bolt		•••		8	,,	
	41277	Coupling	•••	•••	• • • •	1 1	**	
	41364	Rear Casing		•••	• • • •	1 1	**	
	41365	Distance Ring	• • • •	•••	• • •	1 1	,,	
	41368	Runner	•••	• • • •	• • •	1 1	**	
	41369	Reaction Member	•••	• • • •	•••	1	,,	
	41370	Distance Piece	•••	•••	•••	1 1	**	
	41371	Bolt		•••	•••	6	,,	ReactionMembe
	41375	Gasket		• • • •	• • •	2	**	
	41376	Washer	• • • •	• • • •	• • •	1	**	
	41380	³ B.S.F. Bolt				30	,,	Rear Casing to Front Casing.

LIST 7479 (Continued)

ltem No.	Part No.	_	escriptio	n	No.Off	List No.	Remarks			
	42636							1	7479	
	42862	3″ U.N.F. Se						15	,,	
	A7040	Assembly of	Front	Casing		• • •		1	,,	
	46406	Front Casing						1	,,) .
	45782	Serrated Ring	g			,		1	,,	
	46407	Starter Ring	Adapt	or				1 1	;,	A.7040
	45797	Rivet—Serra	ted Ri	ng				1	,,	
	46409	Rivet—Starte	r Rin	g Adap	tor			12	,,	
	46408	Crankshaft A	dapto	r '				1	,,	
	46410	Dowel						2	,,	Crankshaft
	46411	Locking Plate								Adaptor.
	10411	LOCKING FIALE		•••	•••	•••	•••	4	.,,	Crankshaft
	46413	Gasket						1		Adaptor. Coupling
	185K17	Starter Ring						1		Adaptor.
	134493	Ball Bearing	•••					il	,,	
	281809	25 m/m. Circ	lip Ex	t.				1 1	••	
	282711	Ferrule						6	••	
	282712	Bolt				• • • •	•••	6	,,	
	282713	Plug				•••		4	,,	
	282714	Washer				•••	•••	4	"	
	521689	Gland Seal			•••	•••		1	"	
	521690	Spacing Ring	•••		•••	•••		1 1	**	
	521691	1 . D.			•••	•••		1	,,	
	521692	Rubbing Was		•••	•••	•••	•••	1	,,,	
	521693	Stiffener Ring	,	•••	• • • •			1	",	
	521747	Joint	•		•••			1	,,	
	3=11 17			•••	•••	•••		,	,,	

LIST 7496

No.	Part No.	Description		No.Off	List No.	Remarks
	5708 11763 16487 17330 A6831 45725 44318 43666 41367 17330 17954	Starter Ring Circlip—Int ½" B.S.F. Slotted Nut ½" Dia. Spring Washer Assembly of Front Casing Front Casing Starter Ring Adaptor ½" B.S.F. Csk. Screw Serrated Ring ½" Dia. Spring Washer ½" B.S.F. Bolt		 1 1 30 1 1 1 12. 1 12.	7496	For Roller Bearing Rear Casing A.6831

LIST 7496 (Continued)

Item No.	Part No.	Des	criptio	n			No.Off	List No.	Remarks
	19046	Split Pin					1	7496	
	25283	3" Dia. Plain Washe	er	111		•••	6		
- 1	30021	Dallan Daanin	•••				1 1	,,	
	4023	Sub-Assy. of Cluto	h Sho	e Sec	ments	and		,,	
		Linings					1 1		4 per Set
	33272	Clutch Shoe Segme	nts				1 set	"	
	33279	Clutch Shoe Lining	1103		•••	•••	1 set	,,	Sub-Assy. 4023
- 1	33276	Insert Block		•••	•••	•••	4	,,	'
- 1	33278	Clutch Shoe Pin	•••	•••	•••	•••	4	"	
- 1	33287	Garter Spring	• • •	•••	•••	•••		,,	
- 1	38519	3" DCE Dinnel N		•••	•••	•••	1	. "	
	38520	3" B.S.F. Pinnacle N	lut	•••	•••	•••	6	,,	
- 1		8 B.S.F. Pinnacle IV	lut	• • •	• • •	•••	6	,,	
	38600	5" B.S.F. Pinnacle	Vut	• • • •	• • •	• • •	6	"	
	40210	្នឹ" B.S.F. Stud		• • • •	• • •		6	,,	
	41277	Coupling					1	,,	1
	41364	Rear Casing					1	,,	
- 1	41365	Distance Ring					1	,,	
	41368	Runner					1 1	,,	
	41369	Reaction Member					1		
	41370	Distance Piece					1 1	,,	
- 1	41371	3" B.S.F. Bolt					6	"	Reaction Memb
- 1	41372	Runner Shaft					1 1	,,	iveaction riemb
- 1	41374	Distance Piece		• • •	•••		1 1	"	
- 1	41375	C 1	• • •		• • • •		2	**	
	41376	NAZ I	• • • •				00000	,,	
	41380	₹ B.S.F. Bolt					1	,,	
	41300	8 D.S.F. DOIL					30	,,	Rear Casing to
	12/2/	Pagia Dias							Front Casing.
- 1	42636	Baffle Plate		• • •			1	"	
- 1	44313	Adaptor	• • •	• • • •			1	,,	
	44315	§″ U.N.F. Bolt					. 6	,,	
	44317	Dowel		1			2	,,	-
	44333						2	,,	
	44334	Locking Plate					3	,,	
	46266.B	통" U.N.F. Capscrew					6	,,	
	134493	Pall Daguing					1	,,	
.	281809	23 m/m. Circlip Ext					1		
	282711	Ferrule					6	,,	
	282712	Rolt					6	,,	
	282713	Plug	•••		•••		4	,,	
	282714	Washer	•••	•••	•••			"	
	521689	CI 1 C 1	•••	•••	•••	• • • •	4	,,	
	521690	Spacing Ping	•••	•••	•••	••••	1	"	
	521691	Joint Bing	•••	•••	•••	•••	1	,,	
		Joint Ring	•••	•••	•••		1	**	
	521692	Rubbing Washer	•••	•••	•••		1	,,	
	521693	Stiffener Ring	•••	•••	• • • •		1	,,	
	521747	Joint	• • •	•••	•••		1	,,	
	4								

